


INSTRUCTION MANUAL

Pyrheliometer

ISO9060: 2018 Class A

ISO9060: 1990 First class

MS-57

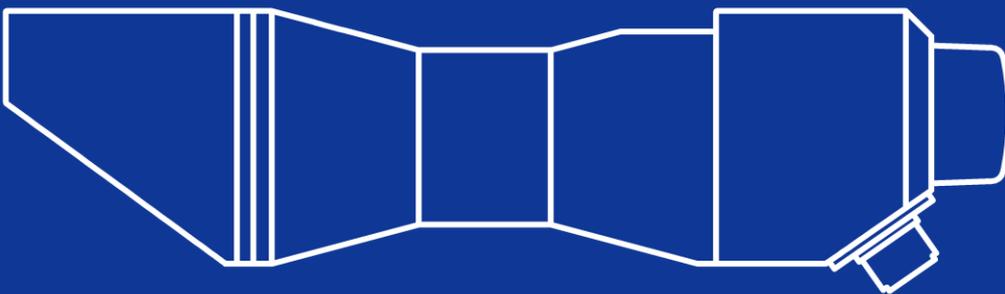

EKO

1. Index

| | |
|--|-----------|
| 1. Index | 1 |
| 2. Important User Information | 2 |
| 2-1. Contact Information | 2 |
| 2-2. Warranty and Liability | 2 |
| 2-3. About Operating Manual | 3 |
| 2-4. Environment | 3 |
| 2-5. ISO/IEC 17025 | 4 |
| 2-6. CE Declaration | 5 |
| 3. Safety Information | 6 |
| 3-1. General Warnings | 6 |
| 4. Introduction | 8 |
| 4-1. Introduction | 8 |
| 4-2. Content of Delivery | 9 |
| 5. Getting Started | 10 |
| 5-1. Parts Descriptions | 10 |
| 5-2. Setup | 11 |
| 5-3. Operation | 17 |
| 6. Maintenance & Troubleshooting | 18 |
| 6-1. Maintenance | 18 |
| 6-2. Calibration and Measurement Uncertainty | 20 |
| 6-3. Troubleshooting | 21 |
| 7. Specification | 22 |
| 7-1. Specifications | 22 |
| 7-2. Dimensions | 24 |
| 7-3. Specification Definitions | 25 |
| 7-4. Product Accessories | 27 |
| APPENDIX | 28 |
| A-1. Symbols | 28 |
| A-2. Radiometric Terms | 29 |
| A-3. Pyrheliometer Characteristics | 30 |
| A-4. Thermistor Temperature Conversion Table | 31 |
| A-5. Pt100 Class A Conversion Table | 32 |

2. Important User Information

Thank you for using EKO Products

Reading this manual is recommended prior to installation and operation of the product. Keep this manual in safe and handy place for whenever it is needed.

For any questions, please contact us at below:

2-1. Contact Information

EKO INSTRUMENTS CO., LTD.

Asia, Oceania Region

| | | |
|------------------|-----------------------------|------------------------|
| www.eko-asia.com | EKO INSTRUMENTS Co., Ltd. | Tel: +81 (3) 3469-6713 |
| info@eko.co.jp | 1-21-8 Hatagaya, Shibuya-ku | Fax: +81 (3) 3469-6719 |
| | Tokyo, 151-0072 Japan | |

Europe, Middle East, Africa, South America Region

| | | |
|-----------------|------------------------------------|------------------------|
| www.eko-eu.com | EKO INSTRUMENTS Europe B.V. | Tel: +31 (0)70 3050117 |
| info@eko-eu.com | Lulofsstraat 55, Unit 28, | Fax: +31 (0)70 3840607 |
| | 2521 AL, Den Haag, The Netherlands | |

North America Region

| | | |
|------------------|------------------------------------|----------------------|
| www.eko-usa.com | EKO INSTRUMENTS USA Inc. | Tel: +1 408-977-7751 |
| info@eko-usa.com | 111 South Market Street, Suite 300 | Fax: +1 408-977-7741 |
| | San Jose, CA 95113 USA | |

2-2. Warranty and Liability

For warranty terms and conditions, please contact EKO Instruments or your distributor for further details.

EKO guarantees that the product delivered to customer has been tested to ensure the instrument meets its published specifications. The warranty included in the conditions of delivery is valid only if the product has been installed and used according to the instructions provided in this operating manual.

In case any manufacturing defect(s) will occur, the defected part(s) will be repaired or replaced under warranty; however the warranty will not be applicable if:

- Any modification or repair has been done by other than EKO service personnel.
- The damage or defect is caused by disrespecting the specifications mentioned on the product brochure or instruction manual.

2-3. About Operating Manual

Copy Rights Reserved by EKO INSTRUMENTS CO., LTD. Making copies of whole or part of this document without permission from EKO is prohibited.

This manual was issued: 2019/04/11

Version Number: 3

2-4. Environment

1. WEEE Directive 2002/96/EC (Waste Electrical and Electronic Equipment)

This product is not subjected to WEEE Directive 2002/96/EC however it should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points.

Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.

2. RoHS Directive 2002/95/EC

EKO Instruments has completed a comprehensive evaluation of its product range to ensure compliance with RoHS Directive 2002/95/EC regarding maximum concentration values for substances. As a result all products are manufactured using raw materials that do not contain any of the restricted substances referred to in the RoHS Directive 2002/95/EC at concentration levels in excess of those permitted under the RoHS Directive 2002/95/EC, or up to levels allowed in excess of these concentrations by the Annex to the RoHS Directive 2002/95/EC.

2-5. ISO/IEC 17025

EKO Instruments Co. Ltd. calibration laboratory is accredited by Perry Johnson Laboratory Accreditation, Inc. (PJLA) to perform pyranometer and pyrhelimeter calibrations in accordance with the requirements of ISO/IEC17025, which are relevant to calibration and testing.

EKO is a unique manufacturer who can offer calibration service for pyranometers and pyrhelimeters in-house. Based on the applied calibration methods EKO provides the best quality solar sensor calibrations compliant to the international standards defined by ISO/IEC17025 / 9847 (Indoor calibration method) and ISO9059 (Outdoor calibration method).

(<http://eko-eu.com/products/solar-radiation-and-photonic-sensors/pyrheliometer>)

ISO/IEC17025 provides a globally accepted basis for laboratory accreditation that specifies the management and technical requirements. With calibrations performed at the EKO Instruments laboratory we enable our customers to:

- Clearly identify the applied calibration methods and precision
- Be traceable to the World Radiation Reference (WRR) through defined industrial standards:
 - ISO9846 Calibration of a pyranometer using a pyrhelimeter
 - ISO9847 Calibration of field pyranometer by comparison to a reference pyranometer
 - ISO9059 Calibration of field pyrhelimeters by comparison to a reference pyrhelimeter
- Obtain repeatable and reliable calibration test results through consistent operations

Our clients will obtain a highly reliable data by using an ISO/IEC17025 calibrated sensor. Our Accredited lab is regularly re-examined to ensure that they maintain their standards of technical expertise.

2-6. CE Declaration



IMPORTANT USER INFORMATION



DECLARATION OF CONFORMITY

We: EKO INSTRUMENTS CO., LTD
1-21-8 Hatagaya Shibuya-ku,
Tokyo 151-0072 JAPAN

Declare under our sole responsibility that the product:

Product Name: pyrhelimeter
Model No.: MS-57

To which this declaration relates is in conformity with the following harmonized standards of other normative documents:

Harmonized standards:

EN 61326-1:2013 Class A (Emission)
EN 61326-1:2013 (Immunity)
EN 61000-4-2 EN 61000-4-3
EN 61000-4-4 EN 61000-4-5
EN 61000-4-6


Following the provisions of the directive:

EMC-directive : 2014/30/EU
Low Voltage Directive : 2014/35/EU

Date: July 26, 2016

Position of Authorized Signatory: Deputy General Manager of Quality Assurance
Dept.

Name of Authorized Signatory: Shuji Yoshida

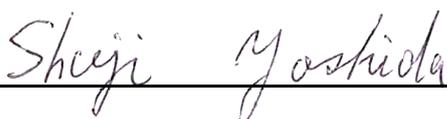Signature of Authorized Signatory: 

3. Safety Information

EKO Products are designed and manufactured with consideration for safety; however, please make sure to read and understand this instruction manual thoroughly to be able to operate the instrument safely in the correct manner.



WARNING CAUTION

Attention to user; pay attention to the instructions given on the instruction manual with this sign.



3-1. General Warnings

1. Setup

- Make sure the instrument and the cables are installed in a location where they will not get soaked.
- When using this instrument by connecting to a measuring instrument, make sure to connect the shield cable to either the signal ground terminal on the measuring instrument side or GND (the reference potential on the single end input side). Noise may be included in the measurement data.
- Although this product is tested to meet EMC Directive compliance requirements, it may not fully satisfy its primary specification/performance when using this product near following locations where strong electromagnetic wave is generated. Please pay attention to the installation environment.
 - Outdoor: High voltage power line, power receiver/distribution facility, etc.
 - Indoor: Large-size chiller, large rotation device, microwave, etc.
- Do not use this product in environment where corrosive gas, such as ammonia and sulfurous acid gas, are generated. It may cause malfunction.
- Do not install in area that cause salt damages. It may cause malfunction by paint peeling off or corrosion. When installing in area with risk of salt damages, make sure to take following measures:
 1. Wrap the connector with self-fusing tape.
 2. Change the fixing screw to bolt screw made of aluminum.
 3. Run the cables in resin pipe or metal pipe treated with salt-resistant paint such as molten zinc plating.
 4. Periodically clean.
- Do not use this instrument in vacuum environment.
- If the cable and main unit are in risk for getting damaged by birds and small animals, protect the cable and the main unit by using:
 1. Reflective tape
 2. Repellent
 3. Cable duct
 4. Installing bird-spike

To avoid measurement errors, use measuring device with input impedance more than 30MΩ.

2. Handling

- Be careful with glass window when handling instruments. Strong impact to this part may damage the glass and may cause injuries by broken glass parts.

3. Power Supply

- When applying the window heating the power consumption at 12 VDC is approximately 0.5 W. Check your DC output Voltage before operating, higher voltages will lead to permanent damage of the heater.
- Use this instrument with 0.5A fuse connected to the power supply line in series. Without connecting the fuse, it has risks of generating heat and fire due to large-current flowing by the power supply when internal damage on the electronics will occurs.

4. Introduction

4-1. Introduction

The ISO9060:2018 “Fast response and spectrally flat Class A” pyrheliometer MS-57 is a research grade normal incidence direct solar irradiance sensor also known as a pyrheliometer or DNI sensor, which highly suitable for routine operation on automated Sun Tracker. The all-weather MS-57 is sensitive to solar irradiance throughout the spectral range 200 to 4000nm and can work under most extreme conditions in a temperature range from -40°C to 80°C.

In principle to perform high precision direct solar radiation measurements under non-stable atmospheric conditions, ideally a fast responding detector is required to detect quick radiation changes. Although photodiode type detector offers a quick response but it has a limited spectral sensitive range; in contrary thermopile broadband detectors cover the full spectral range, but it is considered to be slow. The versatile MS-57 combines all those features of a quick broadband detector enabled by an advanced technology thermopile detector. It combines a unique fast response time (<0.5s 99%), high sensitivity, excellent thermal stability and very low temperature coefficient to make it hardly immune to ambient temperature variations, therefore it is suitable to be used in a wide temperature range.

The MS-57 has a standard full 5° (degrees) opening angle and 1° slope angle as defined by ISO Pyrheliometers Standards and greatly performs when used in combination with the EKO STR-21(G), STR-22(G) or STR-32(G) Sun Tracker. The standard built-in thermistor (44031, 10kΩ@25°C) or platinum resistance temperature sensor (Pt100, Class A, IEC751 compliance) can be used as a temperature reference for extensive research purposes. The integrated low power window heater prevents dew deposition or frost on the outside window.

The MS-57 has a robust but compact and smooth design which forms the new generation of EKO Instruments solar radiometers that are designed for most demanding Photovoltaic and Meteorological applications at any place on earth.

Each MS-57 is calibrated and tested at EKO upon manufacture against EKO's reference sensors which are fully traceable to the WRR (World Radiometric Reference) maintained at the PMOD/WRC (Physikalisch-Meteorologisches Observatorium Davos/World Radiation Center) in Davos, Switzerland. Besides, EKO provides a unique calibration service for pyranometers and pyrheliometers compliant to the international standards defined by ISO/IEC17025 / 9059 (Outdoor calibration method). When an ISO/IEC17025 calibrated sensor is purchased, EKO offers sensor at nearly constant calibration uncertainty. The Accredited lab is regularly re-examined to ensure that they maintain their standards of technical expertise.

4-2. Content of Delivery

Check the package contents first; if any missing item or damage is noticed, please contact EKO immediately.

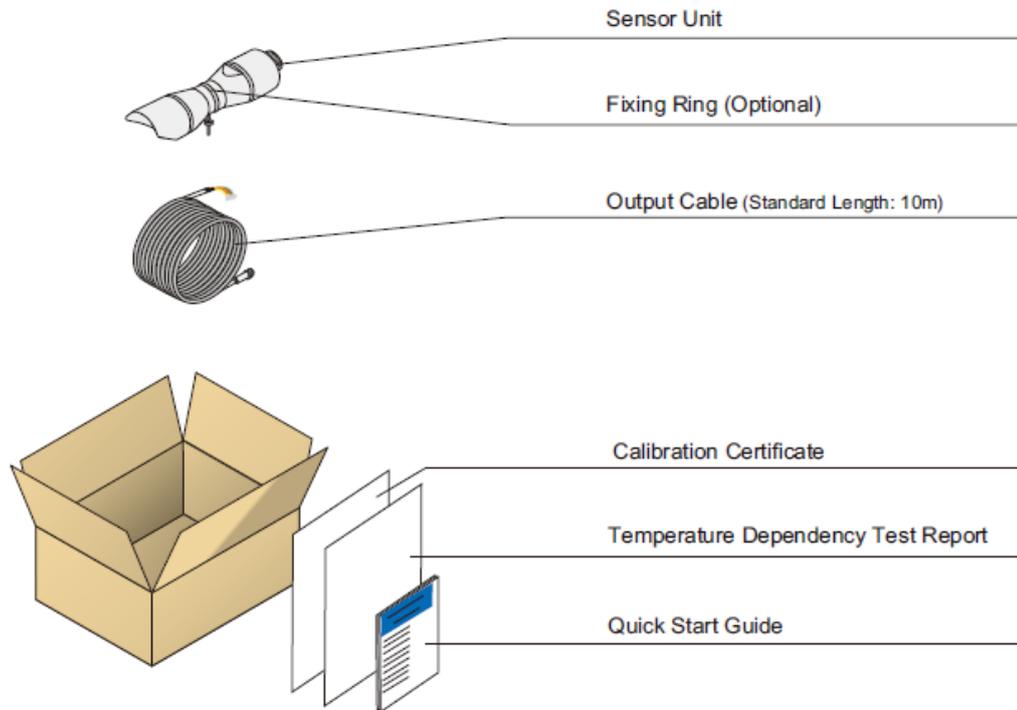


Figure 4-1. Package Contents

5. Getting Started

5-1. Parts Descriptions

MS-57 pyrheliometer is designed to capture direct solar radiation with high precision and long-term reliability. The new concept is a result of combining new technologies with proven pyrheliometer basics to fulfill most stringent demands for solar energy research in the Photovoltaic and Meteorological market.

The Pyrheliometer is based on a well balanced light weight thermopile detector, which gives a highly stable output under most critical situations and variable measurement conditions. Each detector is individually characterized and temperature compensated to guarantee its best performance. During field operating, the detector temperature can be monitored with a thermistor (YSI 44301 / 10k Ω) or platinum resistance temperature sensor (Class A Pt100) to extend further research applications.

Although the MS-57 dimensions are relatively small, it has a full 5° opening angle and 1° slope angle geometry. The front aperture has a unique integrated alignment sight for easy and precise alignment of the instrument on a Sun Tracker. The removable rain cap can be used as a rain shield but can also be taken off when the measurement conditions allow. In order to attain the proper spectral characteristics and spectral range, the pyrheliometer has Quartz precision optics and ultra-low reflective black detector absorber to capture direct solar radiation in the specified spectral range.

The large volume desiccant cartridge ensures a dry environment inside the pyrheliometer to protect delicate optical parts from any condensation. A cable with plug in connector is provided for easy handling and flexibility during installation, maintenance and service. The basic construction outline is shown in the assembly drawing.

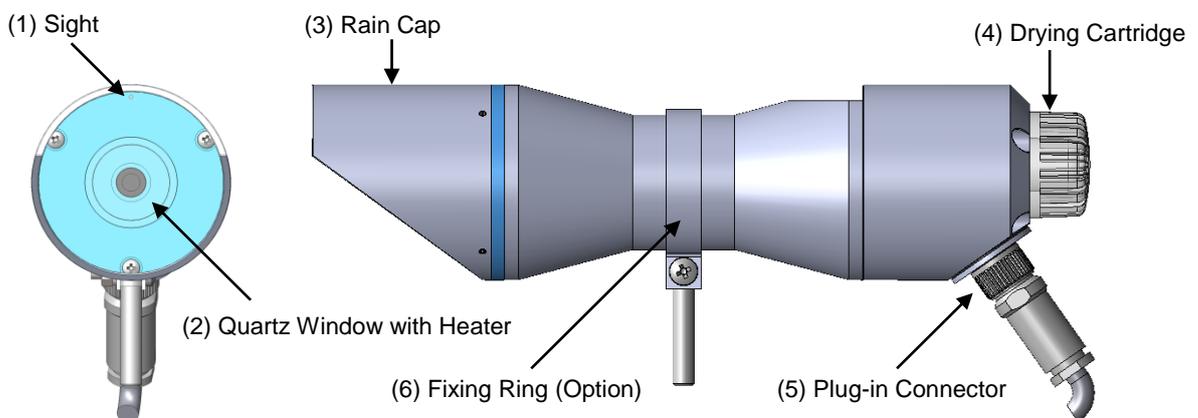
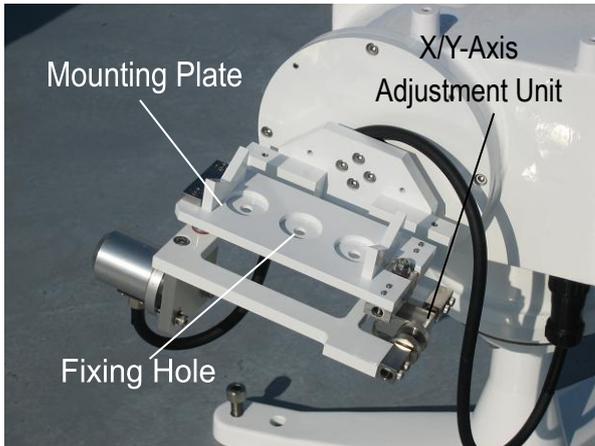
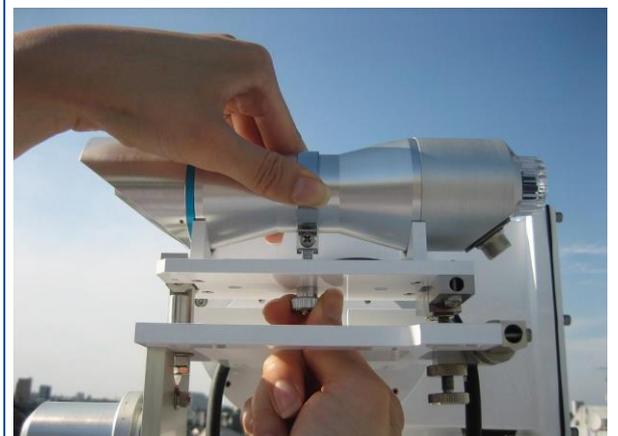


Figure 5-1. MS-57 Body

5-2. Setup

1. Installation

In this application the MS-57 is mounted on the EKO Sun Tracker STR-21G/22G/32G, which is a fully automatic sun tracking system supporting solar sensors capable of measuring Direct, Diffuse and Global radiation.

| | |
|--|---|
|  <p>Mounting Plate</p> <p>X/Y-Axis Adjustment Unit</p> <p>Fixing Hole</p> |  |
| <p>1) When mounting the MS-57, use the fixing hole in the middle of the mounting plate.</p> <p>*If the mounting plate is the 2-hole version, it is necessary to replace with 3-hole version. (See following [2. How to Replace Mounting Plate (Optional)])</p> | <p>2) Remove the knurling nut from the MS-57 mounting screw by hand. (Above picture shows condition the knurling nut is removed.)</p> |
|  |  |
| <p>3) Place the MS-57 on the Sun Tracker mounting plate. Insert the mounting screw through the mounting plate center hole.</p> | <p>4) Attach the knurling nut which was removed earlier back on the mounting screw; tighten so the MS-57 is fixed securely.</p> |


2. How to Replace the Mounting Plate (Optional)




When installing MS-57 on EKO Sun Tracker STR-21G/22G/32G, 3-hole mounting plate is required.

If you already have EKO Sun Tracker purchased before July 2011, you need to purchase the “3-hole mounting plate” (optional part) separately for installing MS-57. If the 3-hole mounting plate is already installed, skip this section and go to [3. Electrical Connection].

[Prepare the following tool for installation]: One Allen Key 2.5 (for M3 screw).

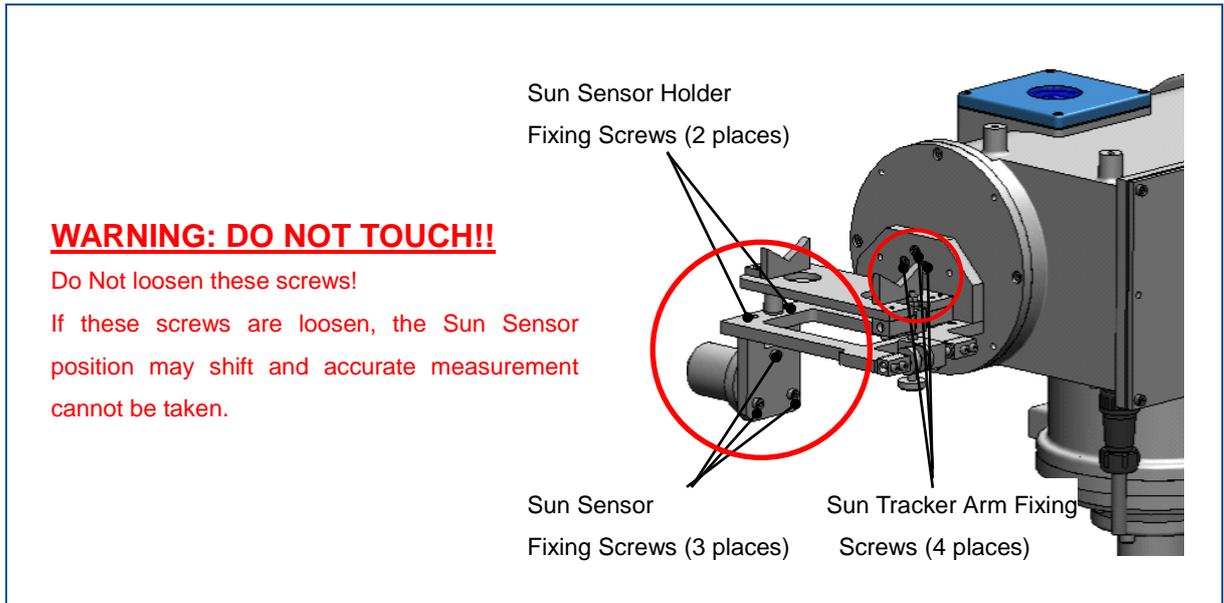


[How to Replace]

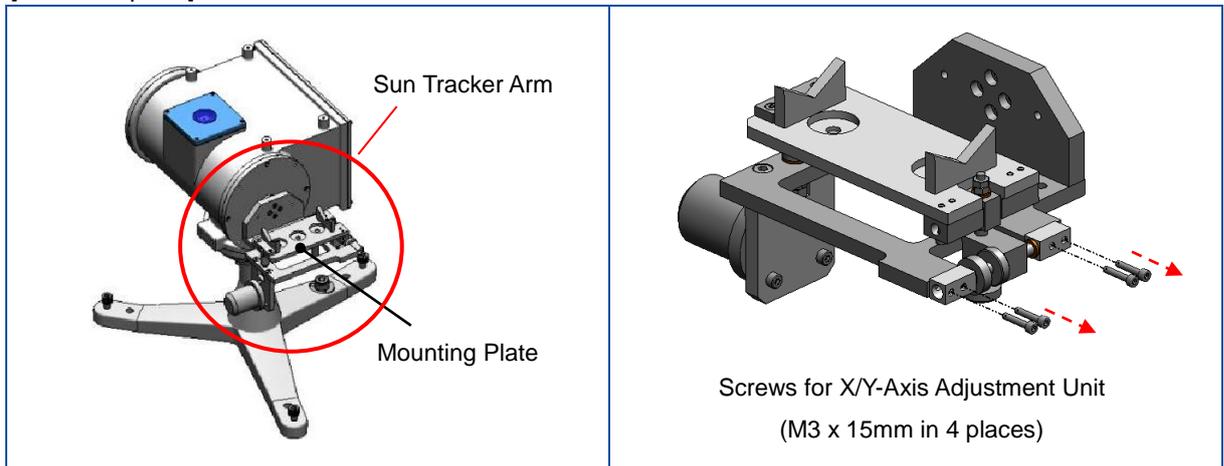


(1) Remove the 4 fixing screws (M3 x 15mm) which are securing the X/Y-Axis adjustment unit on the Sun Tracker Arm (see above image)


*Be careful not to lose the removed screws!

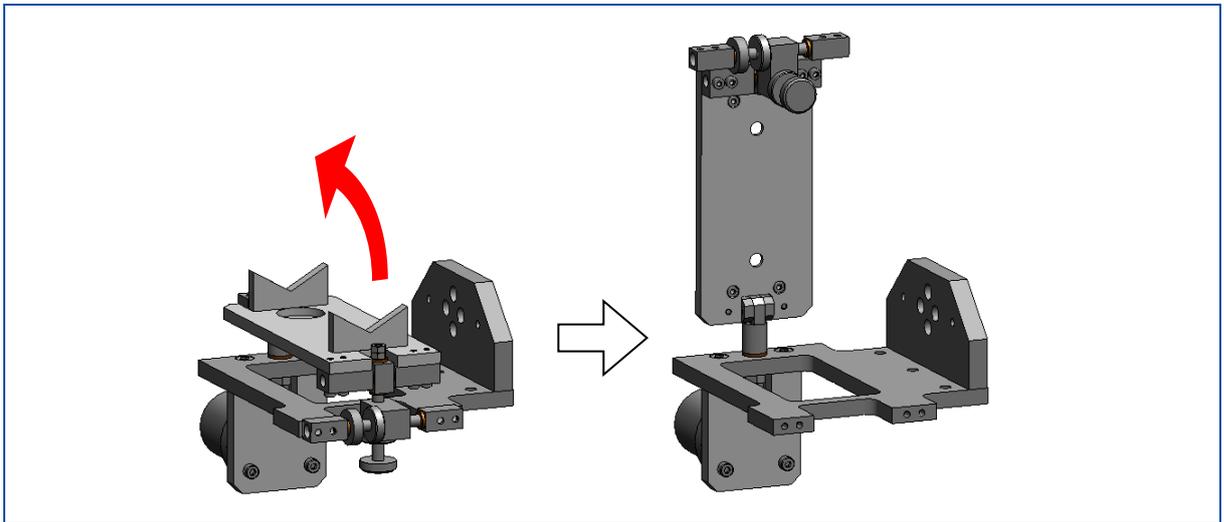

(2) Lift up the mounting plate as shown on the image above.

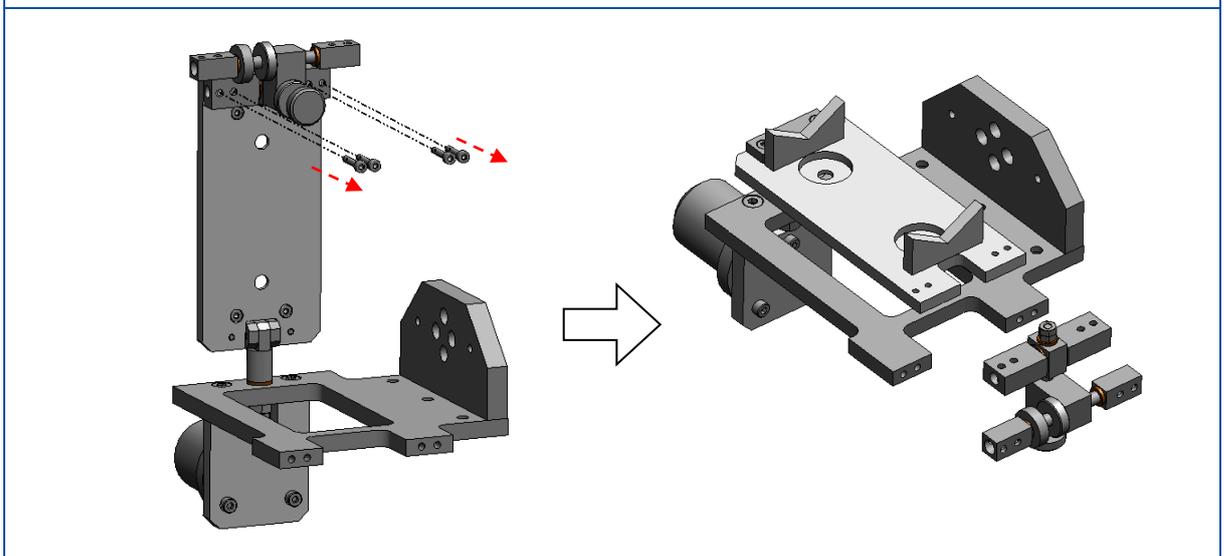


(3) As the mounting plate is lifted, remove another 4 fixing screws (M3 x 15mm) on X/Y-Axis adjustment unit then detach the X/Y-Axis adjustment unit from the mounting plate.

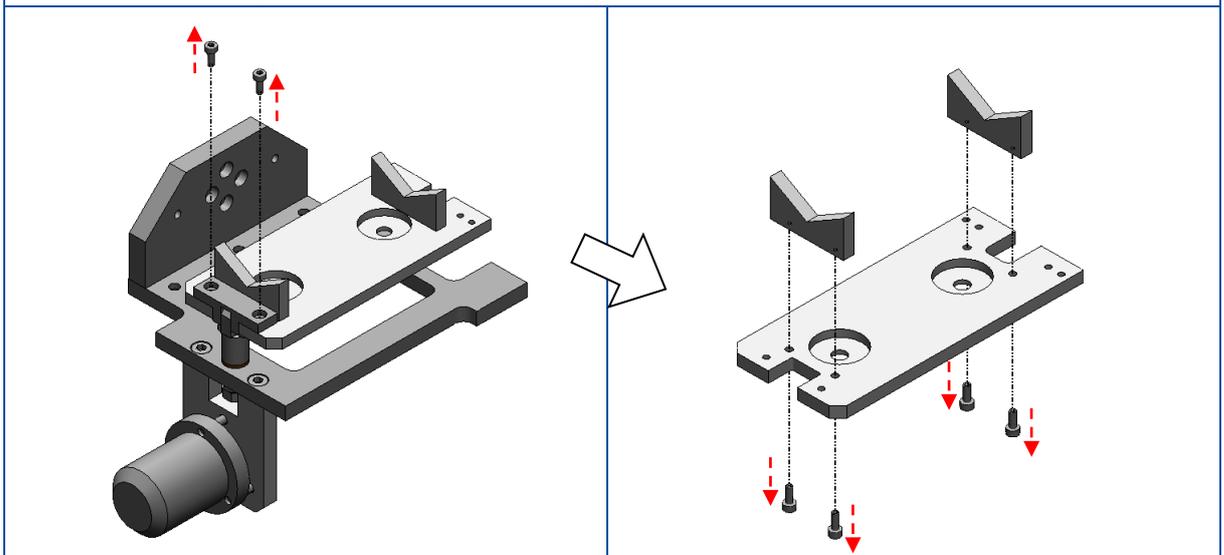


(4) Remove 2 fixing screws (M3 x 15mm) for mounting plate. Detach the mounting plate from the Sun Tracker Arm, and remove the fixing screws on both V-Blocks (M3 x 5mm in 2 places on each V-Block).

Disassembling is completed and the 2-hole mounting plate is replaced with 3-hole mounting plate.

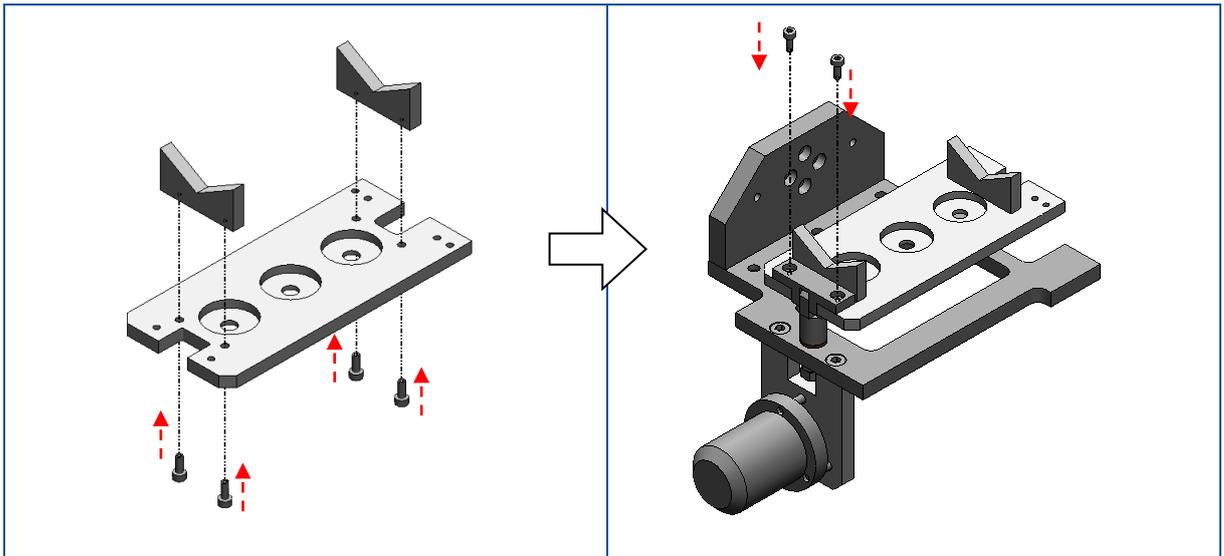

(5) Attach the V-Blocks on the 3-hole mounting plate with fixing screws (M3 x 5mm in 2 places for each V-Block) then attach the 3-hole mounting plate on the Sun Tracker Arm with 2 fixing screws. (M3 x 15mm)

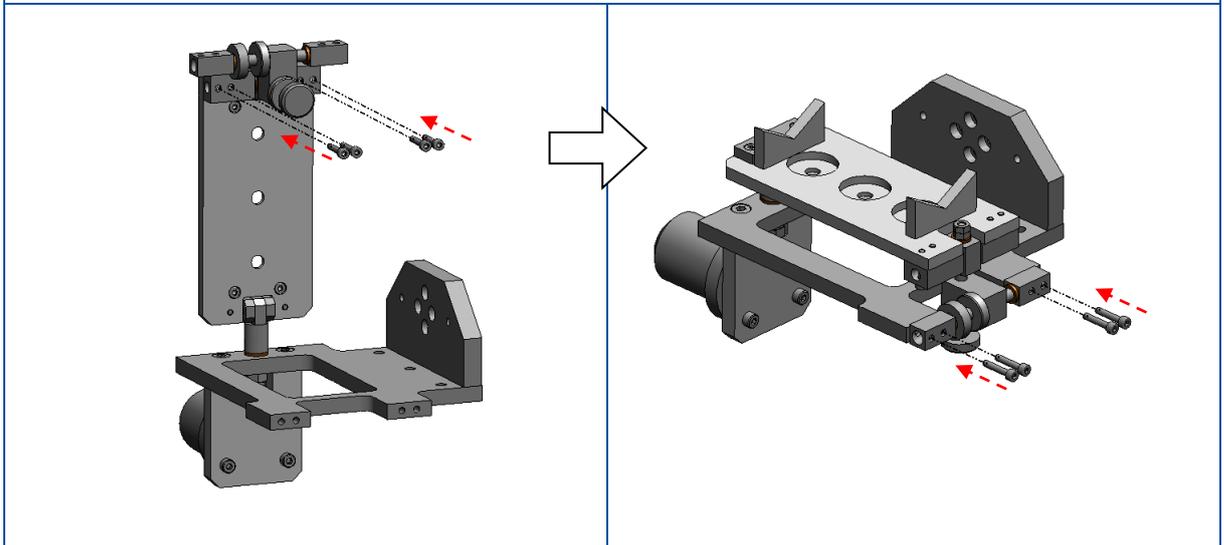

(6) Attach the X/Y-Axis adjustment unit on the 3-hole mounting plate with the fixing screws (M3 x 15mm in 4 places) then attach the X/Y-Axis adjustment unit on the Sun Tracker Arm with the fixing screws (M3 x 15mm in 4 places)


Check to make sure all the screws are placed back in their positions.

3. Electrical Connection

Connect the MS-57 cable to the logger or recording equipment.

The wire color codes are shown in the table below.

Table 5-1 Wire Color Codes
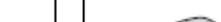
| | Color | Wires |
|---|-------------------------------|---|
|  | Brown | Sensor output + |
|  | Red | Sensor output - |
|  | Yellow | Heater Input (12V DC) + |
|  | Green | Heater Input (12V DC) - |
|  | Blue | PT100 (A) 3-wire (Internal Temperature) |
|  | Gray | |
|  | White | PT100 (B) 3-wire or Thermistor (B) |
|  | Black | Thermistor (A) (Internal Temperature) |
|  | Yellow / Green (Stripe Color) | Ground (Shield) |

Note:

It is recommended to keep the cable length between data logger and the sensor as short as possible. Depending on how the cable is lined, unwanted noise is caused; thus, keep the cable away from the noise cause, such as AC cable or high voltage line. Also in some cases, more noise is seen depending on the type of data logger used.

When installing on the Sun Tracker, make sure to have enough cable length for Sun Tracker rotational movement.

Connect the output cable to the pyrheliometer by inserting the cable connector to the connector on the body then turn the screw cap. Make sure to connect the cable connector; otherwise, the moisture enter to the inside the plug and cause the contact failure.

When installing in area where condensation occur on the Quartz window, it is recommended to use window heater to prevent abnormal output due to condensation. To use the heater, 12V (0.5W) DC power supply is required.

When installing in a site where the distance between MS-57 and the data logger is more than 50m, it is recommended to use voltage/current transducer.

Always connect the shield cable. Otherwise, it will cause the noise and possibly cause the malfunction by the electrostatic or lighting surge.

The pyrheliometer housing is connected to the shielded cable (yellow/green stripe). To avoid 2-point grounding, when the shielded cable is connected to the data logger ground, the pyrheliometer should be electrically isolated from the sun-tracker system or the sun tracking system should not be connected to ground.



To avoid measurement errors use a measuring device with input impedance more than 30M Ω .

4. Sight Spot Adjustment

In order to take an accurate measurement, MS-57 has to be aligned with the sun properly. When the sky is clear, the sunlight will go through the sight and a spot of light is shown on the sight spot surface of body top. Adjust the X/Y-Axis adjustment unit (Zenith and Azimuth angles) so the center of this light spot will hit the dot engraved on the sight spot surface.

When the MS-57 is installed on an automated sun tracking system, like the EKO Sun Tracker and taking a long-term measurement, check the sight spot on the next day after installation to make sure the spot is still in the place, and continue checking the sight spot periodically.

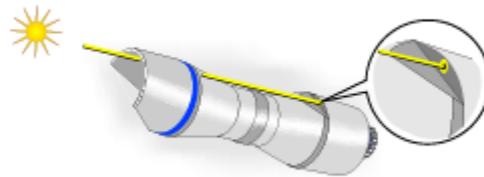


Figure 5-2 Sight Spot Adjustment

5-3. Operation

After installing and connecting MS-57 to the measurement device, MS-57 can be operated and is ready to collect solar radiation data.

It is recommended to use the window heater to prevent dew deposition at the Quartz window. Turn on the heater at least 30 minutes before sunrise. After sunrise, the window heater might be switched off to save energy.

1. Calculate Direct Normal Incidence Solar Irradiance

The direct normal incidence solar irradiance is calculated from the measured output voltage according to the following linear expression.

$$I = E/S$$

| | | |
|---|-------------------------------|--|
| I | [W/m ²]: | Direct Normal Incidence solar irradiance |
| E | [μ V]: | Output voltage of the sensor |
| S | [μ V/W·m ²]: | Sensitivity (Indicated on the calibration certificate) |

2. Calculate Direct Horizontal Incidence Solar Irradiance

The direct horizontal incidence solar irradiance is calculated from the measured output voltage according to the following linear expression.

$$I_{hor.} = I \cdot \sin \theta$$

| | | |
|----------|------|-----------------------|
| θ | [°]: | Solar Elevation Angle |
|----------|------|-----------------------|

3. Calculate Detector Temperature

When a thermistor temperature sensor (44031 10k Ω) is used, the detector temperature T[°C] can be converted from resistance R[Ω] by using the following formula. The temperature conversion table is also shown in Appendix A-2.

[Thermistor (44031 10k Ω)]

$$T = (\alpha + \beta (\ln(R)) + \gamma (\ln(R))^3)^{-1} - 273.15$$

$$\alpha = 1.0295 \cdot 10^{-3}$$

$$\beta = 2.3910 \cdot 10^{-4}$$

$$\gamma = 1.5680 \cdot 10^{-7}$$

When using a platinum resistance temperature sensor (Pt100, Class A), see the temperature conversion table shown in Appendix A-3.

6. Maintenance & Troubleshooting

6-1. Maintenance

Once the MS-57 is installed, it is essentially free of any maintenance although care must be taken to keep the instrument in the best condition for accurate measurement.

1. Data Verification

By analyzing the measurement data (such as irradiance and temperature), user can verify the condition of the instrument. When abnormal data is found, either the sight of the pyrhelimeter is not aligned or the instrument has some defect. Check the condition of cable at the same time checking on the pyrhelimeter setup condition.

2. Cleaning of Quartz Window

Clean the quartz window with a soft cotton cloth and alcohol or demineralized water when it gets soiled. Since soiling will have an effect on the performance of the radiometer by means of reduced optical transmission of the solar radiation and consequently leads to a reduced detector output. Despite no proper indication can be given on the required cleaning interval since it is strongly depending on the local environmental conditions affected by Rain, Snow, Ice, Dust, Sand, or Salt. Environmental factors like frequent rainfall can also have a positive effect on cleaning by washing off any sand or dust particles. For specific cases it might be an advantage to remove the Rain Cap and benefit from this effect. The success of this approach can be determined empirically.

3. Desiccant Inspection

Periodically the desiccants need to be exchanged to maintain a dry environment inside the pyrhelimeter. The frequency of replacement varies with the operating conditions on location but annual replacement is recommended. The section at the next page shows how to replace desiccant.

4. Pyrhelimeter Alignment

The measurement performance can also be inspected by carefully analyzing the measurement data (e.g. irradiance and temperature). Any abnormality found in the data might be caused by misalignment of the sensor or defect. At regular intervals, the quality of the cables can be checked like the alignment of the pyrhelimeter.

5. Clean the Sight

Sometimes rain and dirt maybe collected in the through-hole for the sight and the sight spot cannot be confirmed. Clean and remove the water and/or dirt by using a small diameter pin.

6. Recalibration

EKO Instruments recommend to recalibrate the sensor every 2 years (*).

(*) When there is no condensation inside of the body.

Table 6-1 Maintenance check List

| Check List | Action |
|---------------------------|---|
| Data verification | Check the wiring connections |
| Cleaning of Quartz window | Use soft cotton cloth and alcohol or demineralized water |
| Desiccant inspection | Change in case the silica gel color turned from blue to reddish color |
| Pyrheliometer alignment | Check sights for alignment. When the sight spot cannot be confirmed, clean the through-hole with a pin to remove the water and/or dirt. |
| Recalibration | Every 5 years (*) |

[How to Replace Desiccant]



1) Turn the drying cartridge in anti-clockwise. No tools are required.



2) The drying cartridge can be removed easily by hand.



3) Take off the inner lid.



4) Exchange the desiccant then put the inner lid back on the cartridge. Place the drying cartridge back on the MS-57 body and secure it gently.

6-2. Calibration and Measurement Uncertainty

It is recommended to recalibrate the instrument once every 5 years (*). For further information about the calibration and recalibration, please contact EKO.

1. Calibration Method

The MS-57 is calibrated under natural sunlight against the EKO instruments reference pyrhelimeter which is traceable to the World Radiation Reference (WRR) maintained at the World Radiation Center (PMOD) in Davos (CH).

Both MS-57 and reference pyrhelimeter are mounted on a Sun Tracker to capture the direct solar radiation. The direct solar radiation is measured based on 1 minute averaged value for total of more than 2 hours both in the morning and the afternoon on a clear day. The calibration value of the subjected pyrhelimeter was obtained by multiplying the sensitivity value [$\mu\text{V}/\text{W}\cdot\text{m}^2$] of the reference pyrhelimeter with the averaged ratio of the measured total direct irradiance data. To improve the calibration accuracy and minimize the measurement uncertainty several operating criteria are applied.

(*) When there is no condensation inside of the body.

2. Calibration Uncertainty and Traceability

The criteria for the operating conditions like the indicated ambient temperature, minimum direct radiation and minimum solar elevation angle are applied to minimize the overall uncertainty in the calibration. The pyrhelimeter uncertainty figure is statistically calculated based on a standard deviation of (1.96σ) , which means that 95% of the measured direct irradiance values agree with the reference pyrhelimeter.

The reference pyrhelimeter will be calibrated at every 2 years against a primary standard pyrhelimeter, called absolute cavity pyrhelimeter. The absolute cavity pyrhelimeter is directly traceable to the WRR (World Radiometric Reference) and maintained in the group of standard radiometers calibrated every 5 years during the IPC (International Pyrhelimeter Comparison), as well as by NPC (NREL Pyrhelimeter Comparison), which is held every year.

The data acquisition system is traceable to JEMIC (Japan Electric Meters Inspection Corporation).

6-3. Troubleshooting

This section contains information that can be used to make a failure diagnosis whenever the sensor does not function properly. Contact your distributor or EKO for any further technical support.

Table 6-2 Troubleshooting

| Potential failure | Action |
|---|---|
| The sensor does not give any signal output | <ol style="list-style-type: none"> 1. Measure the impedance across the sensor output wires. This sensor resistance should lie in the specified range (see 7.1 Specifications). If it is close to zero Ohms there is a short circuit (check the wiring). If it is infinite, there is a broken contact (check the wiring). 2. If no problem found from the above, check the output with another measurement device to make sure the actual data logger or measurement device is functioning properly. |
| The sensor signal is unrealistically high or low. | <ol style="list-style-type: none"> 1. Check if the correct sensitivity is applied to the algorithm (see 5-3. Operation). Please note that each sensor has its own individual sensitivity. Check if the voltage reading is divided by the correct sensitivity value. 2. Check the sight spot and make sure the MS-57 is aligned to the direction of the sun. |
| The sensor signal shows unexpected variations. | <p>Although the sensor is hardly susceptible to Electro Magnetic Interference (IME), it may pick up noise depending on the measuring environment.</p> <ol style="list-style-type: none"> 1. Check the presence of strong EM sources of radar, radio, etc.. 2. Check the grounding condition (shielding). Check the condition of the sensor cable. |

7. Specification

7-1. Specifications

Table 7-1 Specification: Specifications are indicated as typical values.

| Characteristics | ISO9060: 2018 | MS-57 |
|--------------------------------------|---------------------------------|----------------------------------|
| | (ISO9060: 1990) | Class A |
| | Spectrally flat | (First class) |
| | Fast response | Compliant |
| Response time 95% output | < 10 Sec | < 0.2 Sec |
| Response time 99% output | --- | < 0.5 Sec |
| Zero off-set a) 5K/hr | $\pm 1 \text{ W/m}^2$ | $\pm 1 \text{ W/m}^2$ |
| Total zero off-set b) | $\pm 2 \text{ W/m}^2$ | $\pm 1 \text{ W/m}^2$ |
| Non-stability | $\pm 0.5 \text{ \%}/1\text{yr}$ | $\pm 0.5 \text{ \%}/5\text{yrs}$ |
| Nonlinearity | $\pm 0.2 \text{ \%}$ | $\pm 0.2 \text{ \%}$ |
| Spectral error | $\pm 0.2\%$ | $\pm 0.2\%$ |
| Spectral selectivity | $\pm 3 \text{ \%}$ | $\pm 1 \text{ \%}$ |
| Temperature response -10 to +40°C | $\pm 0.5 \text{ \%}$ | $\pm 0.5 \text{ \%}$ |
| Temperature response -20 to +50°C | --- | $\pm 1 \text{ \%}$ |
| Tilt response | $\pm 0.2 \text{ \%}$ | $\pm 0.2 \text{ \%}$ |
| Expected Daily Uncertainty | --- | $\pm 1\%$ |

The content of the characteristic item is partly changed from ISO 9060: 1990. Please also refer to "A-3. Pyrheliometer Characteristics"

Table 7-2. Other Specification

| Characteristics | MS-57 |
|---|---|
| Field of View | 5° |
| Wavelength Range | 200 –4000nm |
| Operating Temperature | -40 to +80 °C |
| Maximum Operational Irradiance | 4000W/m ² |
| Sensitivity | Approx.7μV/W·m ⁻² |
| Detector Impedance @ 25°C | Approx.15 kOhms |
| Operating Temperature | -40 to +80 °C |
| Ingress Protection Rating | IP 67 |
| Low Voltage Regulations | IEC 61326-1-2006 |
| Compliance | CE Compliant |
| Outer Dimensions (Length x Diameter) | 217mm x 55mm |
| Cable Length (Standard) | 10 m |
| Weight (Including 10m cable) | 0.6kg (1.6 kg) |
| Power for Window Heater to prevent dew deposition | DC12V / 0.5W |
| Calibration Traceability (ISO 9059) | World Radiation Reference |
| Recommended Recalibration Interval | Every 5 years |
| Sensor for Temperature Measurement (Internal Temperature Measurement) | Pt100 Class A, IEC751 Compliance Thermistor 44031, 10kΩ@25°C |

7-2. Dimensions

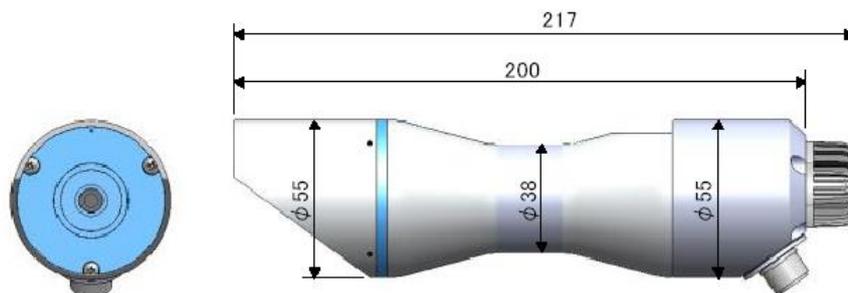


Figure 7-1. MS-57 Outer Dimensions

7-3. Specification Definitions

1. Response Time (Typical)

A response time of less than 0.5s to achieve 99% of the final measurement value is one of the unique features of the MS-57. The small thermopile detector having a low heat capacitance and high thermal conductivity responds quickly to changes of the solar radiation. To keep the detector-output stable and in perfect thermal balance during changing environmental and solar radiation conditions, the detector body is isolated from the sensor housing. When using a data logger with a sampling frequency of 1second, because of the fast responding detector the measurement data are stored without losses of the natural radiation changes.

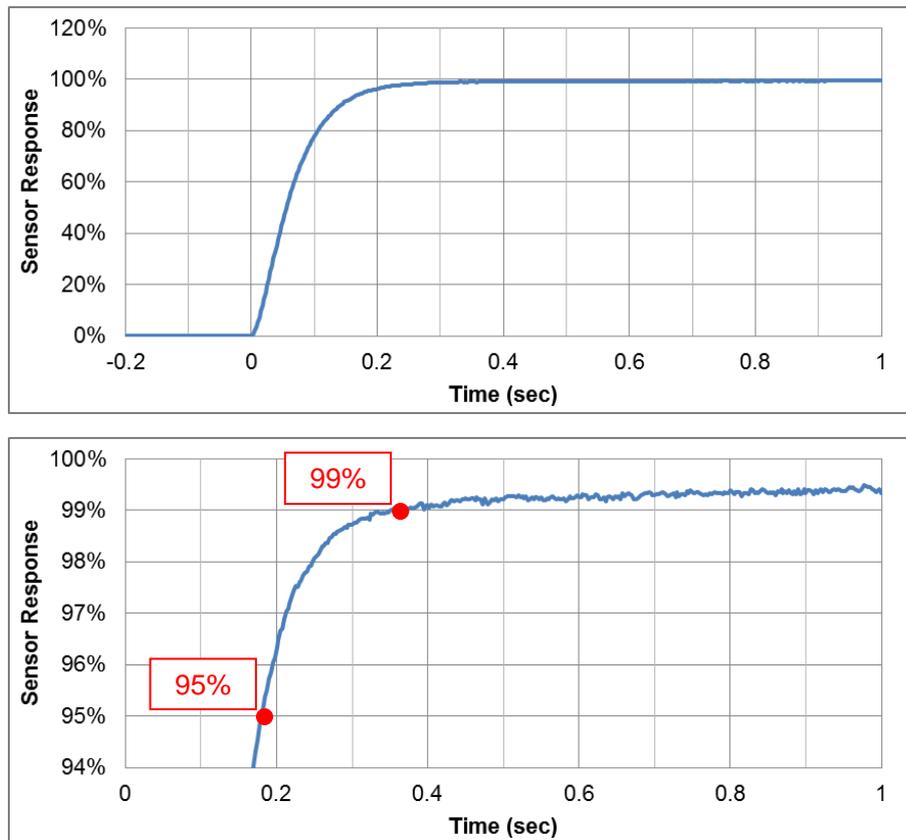


Figure 7-2. Response Time Measurement

2. Temperature Dependency (Typical)

In general the sensitivity of optical detectors depends on the temperature of the instrument because of material properties, known as the temperature coefficient (TC). However the MS-57 sensor construction has a built in special passive compensation network which reduces the temperature dependency to less than $\pm 0.5\%$ between -20°C and $+50^{\circ}\text{C}$. To achieve this low temperature dependency the sensitivity of each sensor is measured and compensated individually in manufacturing process. For the measurement of the temperature dependency a highly stable 1000 W/m^2 light source ($<0.3\%$ variance during total measurement sequence) is used. With each MS-57 measurement report (Temperature Dependency Test Report) is issued indicating the measured temperature dependency of responsivity in steps of 10°C relative to the output at 20°C .

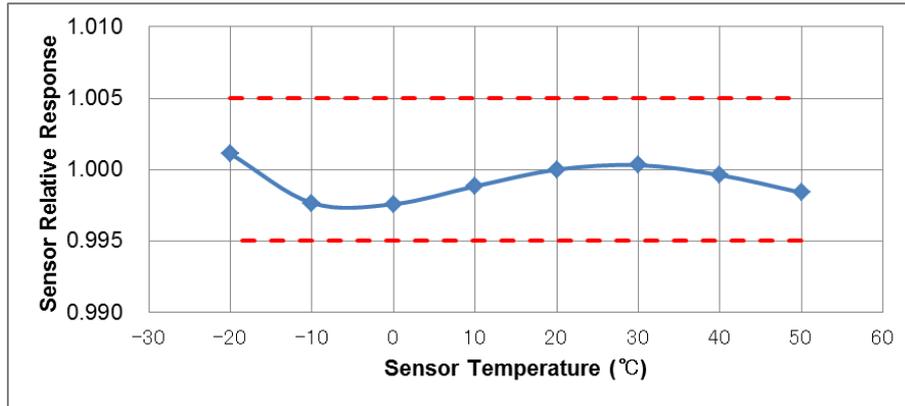


Figure 7-3. Temperature Dependency Measurement

3. Zero Offset (Typical)

Due to a well balanced and light weight detector construction the Zero Offset caused by changing instrument temperature is negligible. The typical Zero Offset was measured according to the ISO 9060 definition at a temperature response of 5K/h change in ambient temperature. A thermally balanced detector is important to guarantee the best measurement stability during variable environmental and solar irradiance conditions.

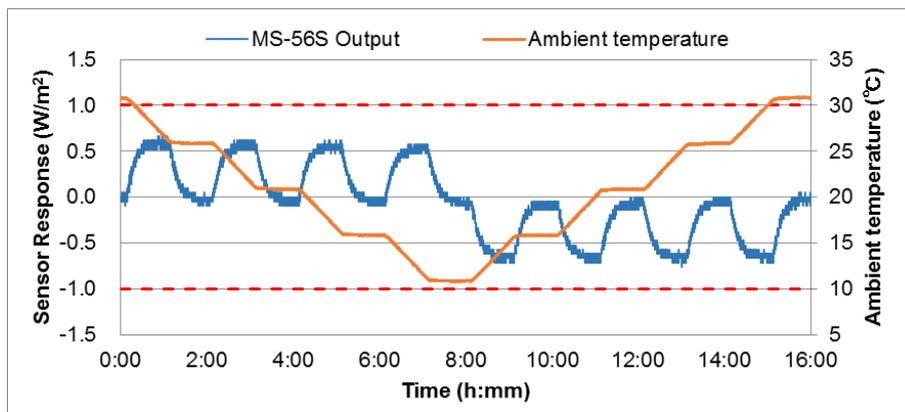


Figure 7-4. Zero Offset Measurement

7-4. Product Accessories

Table 7-3 Accessories List

| Accessories | Details |
|-------------------------|---|
| Cable Length* | 20, 30, 40, 50m |
| STR-21/22 Mounting Jigs | Fixing Ring |
| | Mounting Plate (3-holes) |
| Drying Cartridge | Drying Cartridge |
| Replacement Silica Gel | Replacement Silica Gel (desiccant) container (500g) |

*Standard cable length: 10m

APPENDIX

A-1. Symbols

Table A-1 Definitions of Symbols

| List of symbols | Definitions | Units |
|-----------------|------------------|--|
| E | Output Voltage | μV |
| S | Sensitivity | $\mu\text{V}/\text{W} \cdot \text{m}^{-2}$ |
| t | Time | s |
| τ | Response Time | s |
| T | Temperature | $^{\circ}\text{C}$ |
| I | Solar Irradiance | W/m^2 |

A-2. Radiometric Terms

Table A-2. Definitions of Terms

| | |
|---|---|
| Hemispheric Solar Irradiance | Cosine-weighted solar irradiance received over a solid angle of 2π sr on a plane surface, expressed in units of W/m^2 or kW/m^2 . |
| Global Solar Irradiance, Global Horizontal Irradiance (GHI) | Hemispherical solar irradiance received on a horizontal plane surface, expressed in units of W/m^2 or kW/m^2 . |
| Direct Solar Irradiance, Direct Normal Irradiance (DNI) | Normal-incidence solar irradiance received over a small solid angle which includes the circum solar irradiance, expressed in units of W/m^2 or kW/m^2 . |
| Diffuse Solar Irradiance, Diffuse Horizontal Irradiance (DHI) | Hemispherical solar irradiance without the direct solar irradiance, i.e. indirect irradiance of the scattered solar radiation (by air molecules, aerosol particles, clouds, etc.), expressed in units of W/m^2 or kW/m^2 . |
| Pyranometer | A radiometer designed to measure the hemispheric solar irradiance over the wavelength range of about 300 to 3,000nm. |
| Pyrheliometer | A radiometer designed to measure the direct solar irradiance over a certain solid angle including the circumsolar irradiance. |
| World Radiation Reference (WRR) | Radiometric reference instrument system which has an uncertainty of less than $\pm 0.3\%$, expressed in SI units. This reference is maintained by the World Meteorological Organization (WMO), and it has been issued since January 1, 1980 |
| ISO9060 | An ISO norm (International Standard). The first edition was published in 1990, then the second edition was revised in 2018. Based on the performance of each characteristic, Pyranometer is classified into three classes A, B, and C, and specifications of "Spectrally flat radiometer" and "Fast response radiometer" are set as sub-categories. Pyrheliometer is classified into 4 classes of AA, A, B and C based on the performance of each characteristic, and specifications of "spectrally flat radiometer" and "Fast response radiometer" are set as sub-categories. |

A-3. Pyrheliometer Characteristics

Table A-3. Pyrheliometer Characteristics (see also CIMO Guide, WMO No. 8, 2008)

| | |
|----------------------|--|
| Response Time | The time (seconds) of a pyranometer sensor to reach 95% of its final output signal. (ISO 9060: 2018 added) If the response time reach to 95% is less than 0.5 seconds, "fast response" is attached to the applicable class as a subcategory. |
| Zero Off-Set a | Response (dark-signal) to 5K per hour change in ambient temperature |
| Total zero off-set b | (ISO 9060: 2018 added) Total zero off-set including the effects a) and other sources |
| Non-Stability | Rate of change [%] of the pyranometer sensitivity per year. |
| Nonlinearity | Percentage deviation from the responsivity at 500W/m ² due to any change of irradiance within the range 100W/m ² to 1,000W/m ² . |
| Spectral error | (ISO 9060: 2018 added) Maximum spectral mismatch error of Pyranometer [%] with respect to spectral irradiance at AM 1.5 and AM 5 under multiple atmospheric conditions on fine weather against the reference standard spectral irradiance defined by IEC60904-3: 2016 Photovoltaic devices - "Measurement principles for terrestrial photovoltaic (PV) solar devices with reference spectral irradiance data." |
| Spectral Selectivity | Percentage deviation of the product of spectral absorptance and spectral transmittance from the corresponding mean within the range 0.35µm to 1.5µm. |
| Temperature Response | (ISO 9060: 2018 modified) Percentage maximum output error due to any change of ambient temperature between -10 to 50°C against the output at 20°C. |
| Tilt Response | (ISO 9060: 2018 modified) Percentage deviation from the responsivity at 0° tilt (horizontal) due to change in tilt from 0° to 180° at 1,000W/m ² . |

A-4. Thermistor Temperature Conversion Table

Table A-4 Temperature Conversion table for the Thermistor (44031, 10kΩ@25°C)

| T [°C] | R [Ω] | T [°C] | R [Ω] | T [°C] | R [Ω] |
|--------|--------|--------|-------|--------|-------|
| -30 | 135200 | 0 | 29490 | 30 | 8194 |
| -29 | 127900 | 1 | 28150 | 31 | 7880 |
| -28 | 121100 | 2 | 26890 | 32 | 7579 |
| -27 | 114600 | 3 | 25690 | 33 | 7291 |
| -26 | 108600 | 4 | 24550 | 34 | 7016 |
| -25 | 102900 | 5 | 23460 | 35 | 6752 |
| -24 | 97490 | 6 | 22430 | 36 | 6500 |
| -23 | 92430 | 7 | 21450 | 37 | 6258 |
| -22 | 87660 | 8 | 20520 | 38 | 6026 |
| -21 | 83160 | 9 | 19630 | 39 | 5805 |
| -20 | 78910 | 10 | 18790 | 40 | 5592 |
| -19 | 74910 | 11 | 17980 | 41 | 5389 |
| -18 | 71130 | 12 | 17220 | 42 | 5193 |
| -17 | 67570 | 13 | 16490 | 43 | 5006 |
| -16 | 64200 | 14 | 15790 | 44 | 4827 |
| -15 | 61020 | 15 | 15130 | 45 | 4655 |
| -14 | 58010 | 16 | 14500 | 46 | 4489 |
| -13 | 55170 | 17 | 13900 | 47 | 4331 |
| -12 | 52480 | 18 | 13330 | 48 | 4179 |
| -11 | 49940 | 19 | 12790 | 49 | 4033 |
| -10 | 47540 | 20 | 12260 | 50 | 3893 |
| -9 | 45270 | 21 | 11770 | 51 | 3758 |
| -8 | 43110 | 22 | 11290 | 52 | 3629 |
| -7 | 41070 | 23 | 10840 | 53 | 3504 |
| -6 | 39140 | 24 | 10410 | 54 | 3385 |
| -5 | 37310 | 25 | 10000 | 55 | 3270 |
| -4 | 35570 | 26 | 9605 | 56 | 3160 |
| -3 | 33930 | 27 | 9227 | 57 | 3054 |
| -2 | 32370 | 28 | 8867 | 58 | 2952 |
| -1 | 30890 | 29 | 8523 | 59 | 2854 |

A-5. Pt100 Class A Conversion Table

Table A-5 Conversion Table for Pt100 Class A (complying with JIS C 1604 1997)

| T [°C] | R [Ω] | T [°C] | R [Ω] | T [°C] | R [Ω] |
|--------|-------|--------|-------|--------|-------|
| -30 | 88.2 | 0 | 100.0 | 30 | 111.7 |
| -29 | 88.6 | 1 | 100.4 | 31 | 112.1 |
| -28 | 89.0 | 2 | 100.8 | 32 | 112.4 |
| -27 | 89.4 | 3 | 101.2 | 33 | 112.8 |
| -26 | 89.8 | 4 | 101.6 | 34 | 113.2 |
| -25 | 90.2 | 5 | 102.0 | 35 | 113.6 |
| -24 | 90.6 | 6 | 102.3 | 36 | 114.0 |
| -23 | 91.0 | 7 | 102.7 | 37 | 114.4 |
| -22 | 91.4 | 8 | 103.1 | 38 | 114.8 |
| -21 | 91.8 | 9 | 103.5 | 39 | 115.2 |
| -20 | 92.2 | 10 | 103.9 | 40 | 115.5 |
| -19 | 92.6 | 11 | 104.3 | 41 | 115.9 |
| -18 | 92.9 | 12 | 104.7 | 42 | 116.3 |
| -17 | 93.3 | 13 | 105.1 | 43 | 116.7 |
| -16 | 93.7 | 14 | 105.5 | 44 | 117.1 |
| -15 | 94.1 | 15 | 105.8 | 45 | 117.5 |
| -14 | 94.5 | 16 | 106.2 | 46 | 117.9 |
| -13 | 94.9 | 17 | 106.6 | 47 | 118.2 |
| -12 | 95.3 | 18 | 107.0 | 48 | 118.6 |
| -11 | 95.7 | 19 | 107.4 | 49 | 119.0 |
| -10 | 96.1 | 20 | 107.8 | 50 | 119.4 |
| -9 | 96.5 | 21 | 108.2 | 51 | 119.8 |
| -8 | 96.9 | 22 | 108.6 | 52 | 120.2 |
| -7 | 97.3 | 23 | 109.0 | 53 | 120.6 |
| -6 | 97.7 | 24 | 109.3 | 54 | 120.9 |
| -5 | 98.0 | 25 | 109.7 | 55 | 121.3 |
| -4 | 98.4 | 26 | 110.1 | 56 | 121.7 |
| -3 | 98.8 | 27 | 110.5 | 57 | 122.1 |
| -2 | 99.2 | 28 | 110.9 | 58 | 122.5 |
| -1 | 99.6 | 29 | 111.3 | 59 | 122.9 |



EKO Asia, Oceania

1-21-8 Hatagaya,
Shibuya-ku, Tokyo
151-0072 Japan
P. +81.3.3469.6711
F. +81.3.3469.6719
info@eko-asia.com
www.eko.co.jp

EKO North America

111 South Market Street,
Suite 300, San Jose,
CA 95113, USA
P. +1-408-977-7751
F. +1-408-977-7741
info@eko-usa.com
www.eko-usa.com

**EKO Europe,
Middle East, Africa,
South America**

Lulofsstraat 55, Unit 28,
2521 AL, Den Haag,
The Netherlands
P. +31 (0)70 3050117
F. +31 (0)70 3840607
info@eko-eu.com
www.eko-eu.com